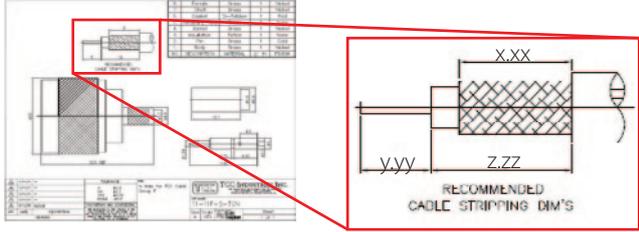
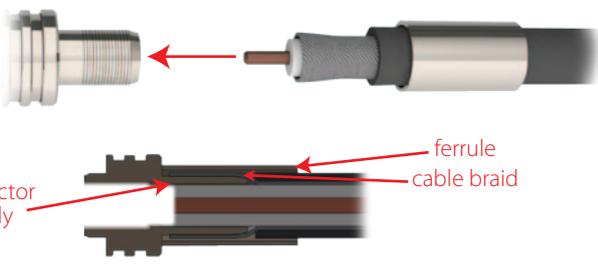


## Installation Guide : Solderless Crimp Type Connectors

<p><b>1</b></p>  <p>Refer to the connector drawing for proper cable stripping dimensions</p>	<p><b>2</b></p>  <p>Cut the cable jacket according to the stripping dimensions</p>	
<p><b>3</b></p>  <p>Trim the braid according to the stripping dimensions</p>	<p><b>4</b></p>  <p>If needed, cut the foam insulator according to the stripping dimensions</p>	
<p><b>5</b></p>  <p>Chamfer the edge of the center conductor at a 45° angle</p>	<p><b>6</b></p>  <p>Slide the ferrule onto the cable</p>	<p><b>7</b></p>  <p>Spread the cable braid</p>
<p><b>8</b></p>  <p>Push the cable straight into the connector until it stops. Ensure that the cable center conductor is inserted within the connector's inner contact and that the cable braid slides over the connector body's sleeve. Slide the ferrule forward over the cable braid.</p>	<p><b>9</b></p>   <p>Crimp the ferrule to secure the connector in place</p>	