




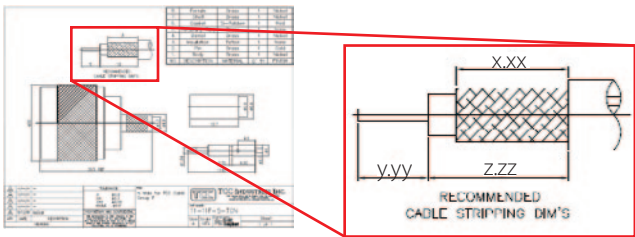


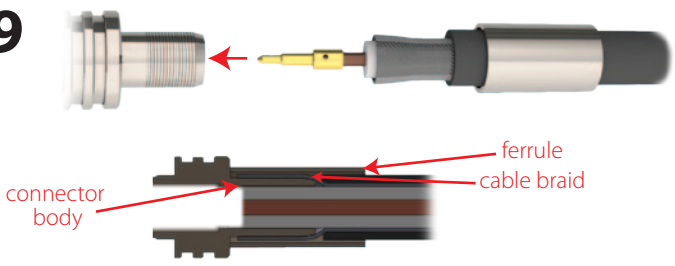



Installation Guide : Crimp Type Connectors

<p>1</p>  <p>Refer to the connector drawing for proper cable stripping dimensions</p>	<p>2</p>  <p>Cut the cable jacket according to the stripping dimensions</p>	
<p>3</p>  <p>Trim the braid according to the stripping dimensions</p>	<p>4</p>  <p>If needed, cut the foam insulator according to the stripping dimensions</p>	
<p>5</p>  <p>Slide the ferrule onto the cable</p>	<p>6</p>  <p>Spread the cable braid</p>	<p>7</p>  <p>Slide the pin onto the cable's center conductor</p>
<p>8</p>  <p>Crimp or solder the pin onto the center conductor</p>	<p>9</p>  <p>Push the cable straight into the connector until it stops. Ensure that the cable braid slides over the connector body's sleeve. Slide the ferrule forward over the cable braid.</p>	
<p>10</p>  <p>Crimp the ferrule to secure the connector in place</p> 